


When two or more windows are installed within a few inches of each other, it may be best to install just one sill that extends the width of the multiple openings.

Tools and Materials

- Tape measure
- Small square
- Pencil
- Wood Shims or paint paddles
- Saber saw or small circular saw
- Polyurethane construction adhesive
- Weatherproof paintable caulk

Always wear safety eye wear when operating power tools.

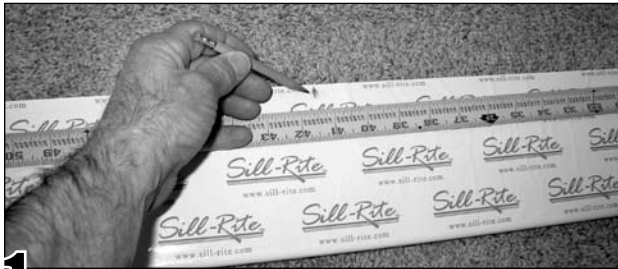

1 Measure and mark the center of the sill.



2 Measure and mark on the wall the center of the combined window openings.



3 Temporarily, install shims at the center of each window opening so that they extend at least three inches beyond the window sill.

Premium Sill — Multiple Windows Installation

Make sure you read and understand these instructions before beginning your installation.




4 Set the sill on the shims and line up the center line you marked on the sill with the line you marked on the wall in step 2.



5 With a square, mark each edge of the window openings on the Sill-Rite sill and extend the mark.



6 Measure the depth of the window openings and transfer markings to the sill.

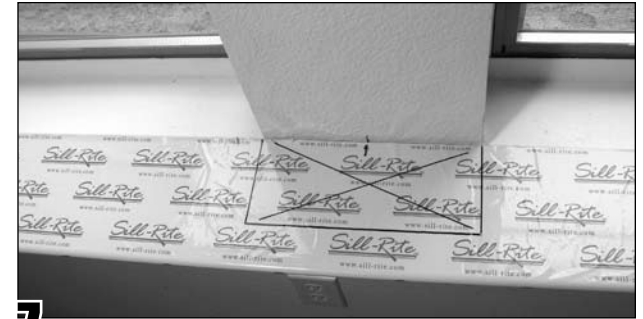

7 Connect the measurement markings on the Sill-Rite sill. This will indicate the cuts that need to be made.



8 Cut on the extended lines. Do not cut past the intersections.



9 Remove the shims and set the Sill-Rite sill in the openings. Check for fit and adjust as necessary. Finish installing by following steps 8-11 of the **Basic Installation Instructions**.